



User Manual of Omnik Internal Data Collector

Omnik New Energy Co.,Ltd.

Catalog

- 1. Unpacking 2
- 2. PV data collector interface and buttons 2
- 3. Set up antenna..... 3
- 4. S/N Label 3
- 5. Connect the PV data collector to the inverter (Shown in Picture 5-1) 3
 - 5.1 Connection..... 3
 - 5.2 IP Address Display and settings..... 4
- 6. Register on monitoring website..... 7
 - 6.1 Click Register button to go to registering interface for new account 7
 - 6.2 Fill in user's information as required 7
 - 6.2.1 "End User" Account..... 8
- 7. Network Settings (In AP mode by WiFi) 10
- 8. Login the PV monitoring system to manage the power station 19
 - 8.1 "End User" User Interface 19
- 9. iPhone & iPad application 24
 - 9.1 Auto Mode:..... 24
 - 9.2 Manual Mode 26
 - 9.2.1 Step for monitoring without Internet connection (Manual Mode)..... 26
 - 9.2.2 Features..... 26
- 10. Contact..... 28
- Appendix 29
 - 1. WiFi Card Install SOP 29
 - 1.1 Disassembly 29
 - 1.2 Preparation 29
 - 1.3 Installation 31
 - 2. LED Indicators 33
 - 3. Troubleshooting..... 35

1. Unpacking

If your inverter had installed the WiFi card, please go to 6. Register on monitoring website.

After unpacking the box, please check the parts according to the below list. Contact the manufacturer immediately, should if you find any damage, missing or and wrong model.



Picture 1-1

| No. | Name | Quantity |
|-----|-------------------|----------|
| A | PV data collector | 1 |
| B | WiFi antenna | 1 |

2. PV data collector interface and buttons




Picture 2-1

| No. | Name |
|-----|--------------------------|
| A | 12pin connecting fingers |
| B | Reset Button |
| C | I-PEX Interface |

3. Set up antenna

Connect the WIFI antenna to I-PEX interface on data collector as shown in Picture 3-1

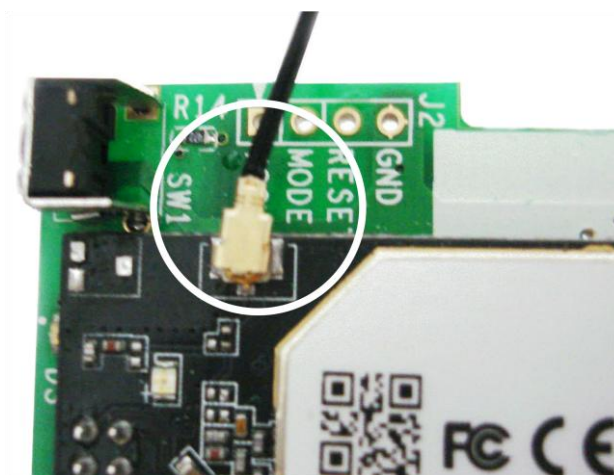

Picture 3-1

4. S/N Label



Picture 4-1

5. Connect the PV data collector to the inverter (Shown in Picture 5-1)

5.1 Connection

1. Power off the inverter
2. Open the RS232/RS485 interface panel
3. Plug the data collector with antenna onto the inverter through the connecting fingers
4. Power on the inverter

Note: Due to the shielding of the metal case, please keep the antenna outside of the inverter. Otherwise, the signal of wireless communication will be too weak.

The detailed installation SOP, please refer appendix 1. WiFi Card Install SOP



Picture 5-1

5.2 IP Address Display and settings



Picture 5-2

Press Picture 5-2 the function “button” and after S/N: xxxxxx(Picture 5-3 WiFi Card Number) the display will change to IP address, it is possible there are 3 case:


Picture 5-4-1 0.0.0.0 (router ssid&password is not found by wi-fi card , if you have not set connect your router, factory value)

Picture 5-4-2 10.10.100.254 (restore default value)

Picture 5-4-3 192.168.16.55 (after setting ok)



Picture 5-3

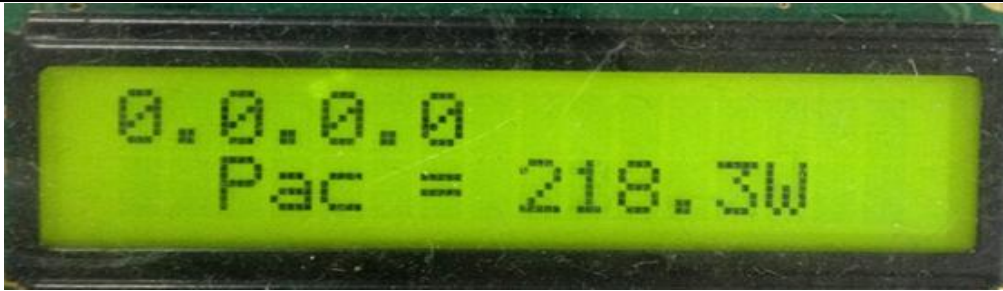

Picture 5-4-1



Picture 5-4-2



Picture 5-4-3

When you see the IP address, Press Function button for 5 seconds , the default value will be Displayed as in Picture 5-5



Picture 5-5

Continue to press the function key, you will see the following picture: YES Pac=xxxw




Picture 5-6

When you see Picture 5-6 , Press Function button for 5 seconds , you will see SET OK as in Picture 5-7



Picture 5-7

Picture 5-7, automatically quit setting after more than 30 seconds, it will show 10.10.100.254 or 0.0.0.0 IP, Picture 5-8

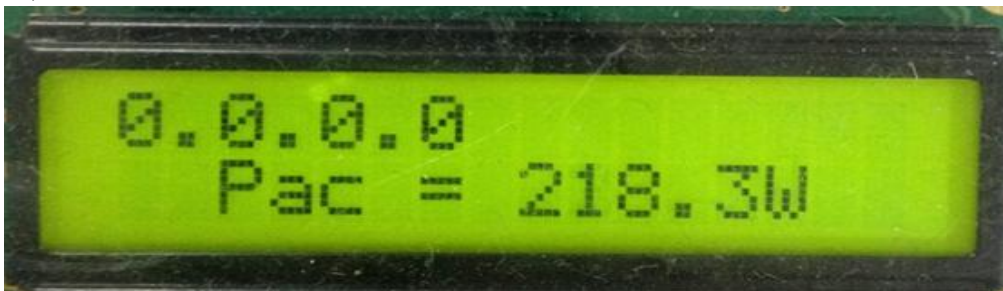

Picture 5-8

6. Register on monitoring website


Omnik's PV monitoring system is supported by: IE8, Firefox, Chrome, safar. Login the website <http://www.omnikportal.com>, click register to enter the user registration page, follow the requirements for registration, please fill in the information for register. After successful registration, enter the mailbox and activity the account, then to complete the registration.

6.1 Click Register button to go to registering interface for new account



Picture 6-1

6.2 Fill in user's information as required

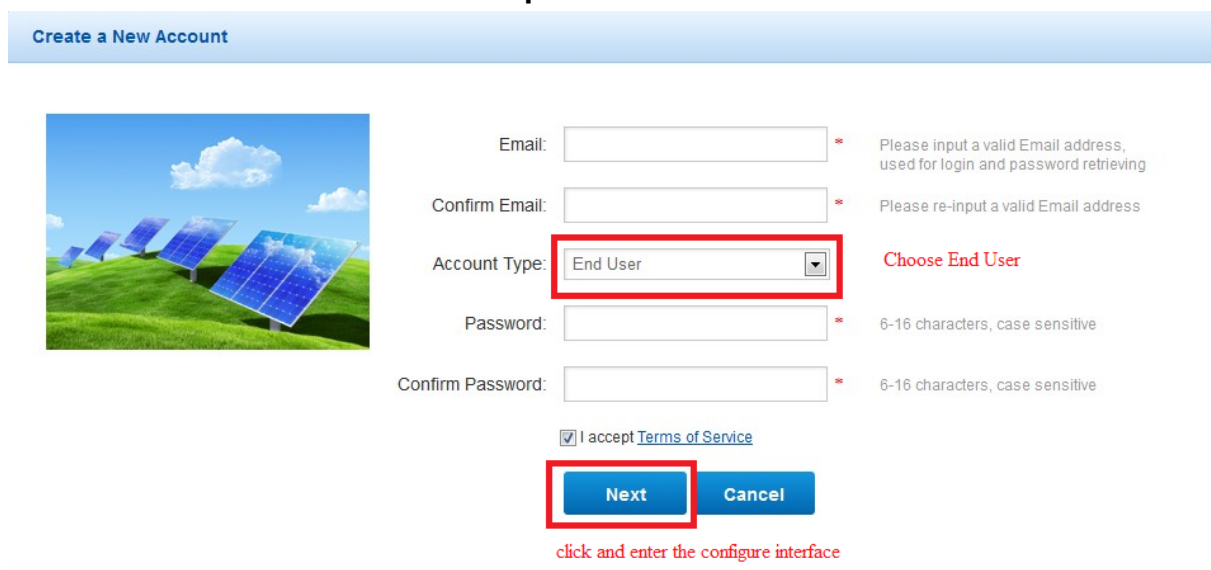

Picture 6-2

Remarks: please read the <Omnik service agreement >carefully, the enclosure is the cost list for all the countries, please choose your operators **End User** means the final user “*” you must fill it

6.2.1 “End User” Account

Site Name *Maximum 20 Letters

Upload Image **Click and Choose the Picture**



Click "OK" to Save pic

Country *

Province/State *

City *

Street [Locate Your Site On Map](#)

ZIP Code

Timezone

Choose your Country Format

Temperature Unit

System Size(kWp) *

Temperature Unit

System Size(kWp)

Feed-in Tariff(FIT)

Panel Type

Inverter Type

Description

Make This Site Public

Registration **Fill in WiFi Card S/N Code, see picture 4-1**

Datalogger S/N

Installer

Contact

Name


Phone

Finish the register

Picture 6-3

After the register, you may enter next chapter 7. **Network Settings (In AP mode by WiFi)**


7. Network Settings (In AP mode by WiFi)

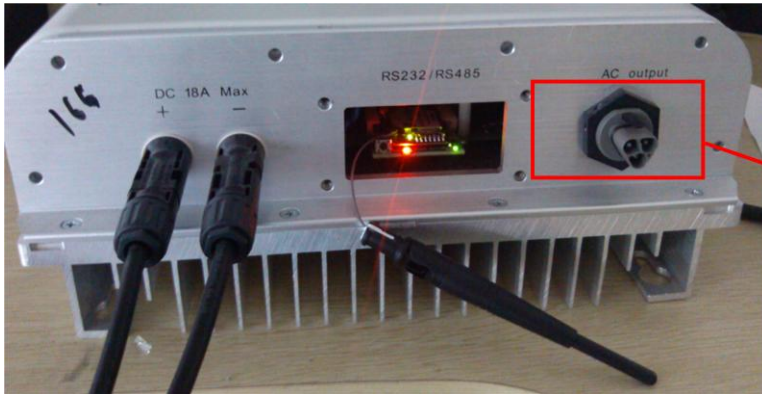

Insert the module, and turn on the DC power, three minutes later enter the next step.

Picture 7-1


1. Prepare a computer or device, e.g. tablet PC and smart phone, that enables WiFi
2. Obtain an IP address automatically
 - Open Wireless Network Connection Properties, double click **Internet Protocol Version 4(TCP/IPv4)**
 - Select Obtain an IP address automatically, and **click OK**

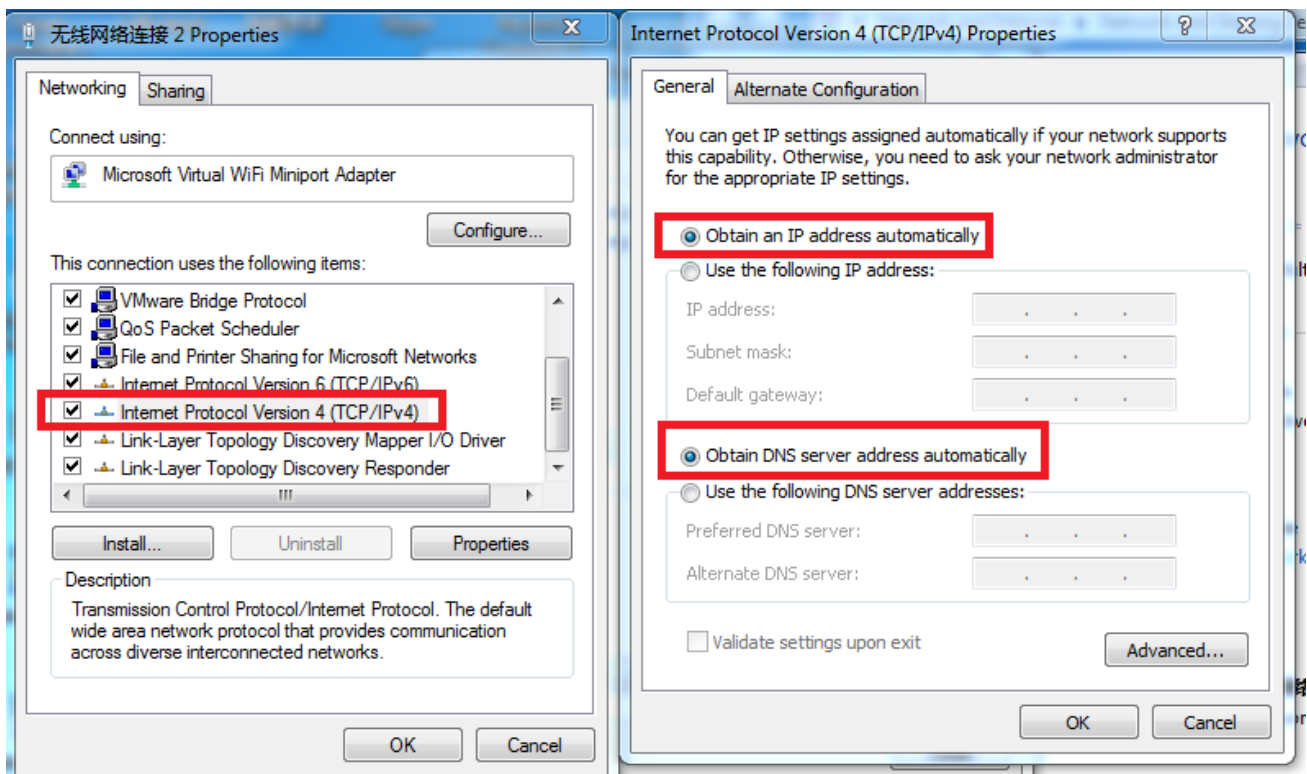


Picture 7-2

3. Open wireless network connection and click **View Wireless Networks**

Select wireless network of the data logging module, no passwords required as default. The network name consists of **AP** and the **serial number** of the product. Then click **Connect**.

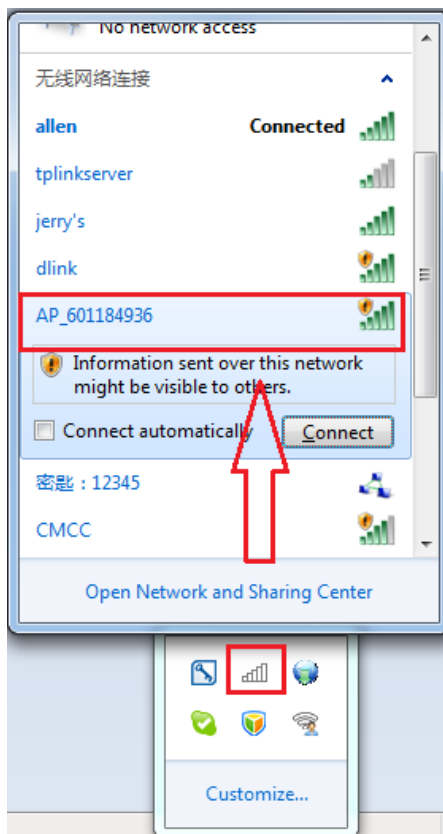

Picture 7-3

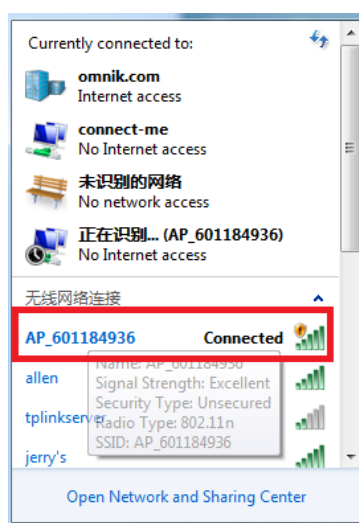

Picture 7-4

Connection successful

Notice: If AP_(serial number of product) is not available in the wireless network list, there may be problems in the connection or setting of data logging module. Please check if the WiFi had installed ok, and inverter has been powered on.

Before troubleshooting, please inquire with your inverter installer whether you are allowed to remove the cover of the inverter to trouble shoot the module. If not allowed, please contact customer service.

4. Set parameters of WiFi module

(a) Open a web browser, and enter 10.10.100.254(the Default ip address of WiFi card, you may set domain name access, please see the picture 6-14), then fill in username:**admin** and password:**admin**, both of which are admin as default.

Recommended browsers: Internet Explorer 8+, Google Chrome 15+, Firefox 10+


Note:

1. If the IP address shows **0.0.0.0** (factory value)on your LED (Picture5-4-1), it is not a correct address. There are 2 cases show 0.0.0.0:

- Not connect router rightly, you need reset to connect you router to make it right
- Card loose in the inverter, please check your inverter, see Appendix: 1.WiFi Card Install SOP

2. The default username &password :admin, admin, we suggest modify the username&password:


Step: choose Account, input your username &password.

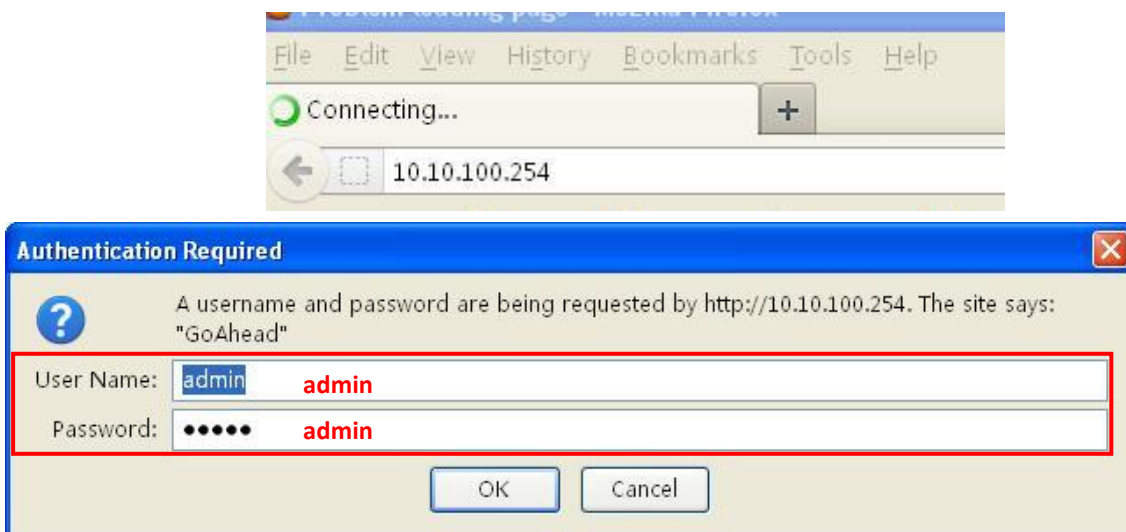

Picture 7-5

(b) In the configuration interface of WiFi module, you can view general information of the module.


Follow the setup wizard to start quick setting.

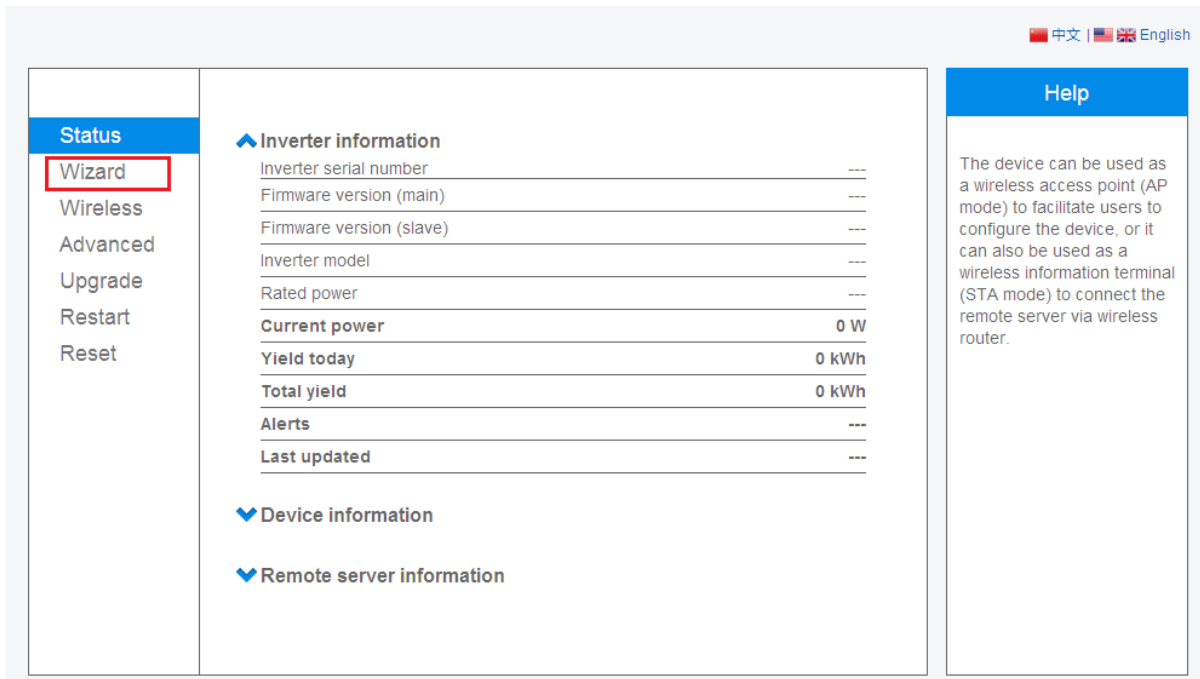

Picture 7-6
Click **Wizard** to start




Picture 7-7
Click **Start** to continue

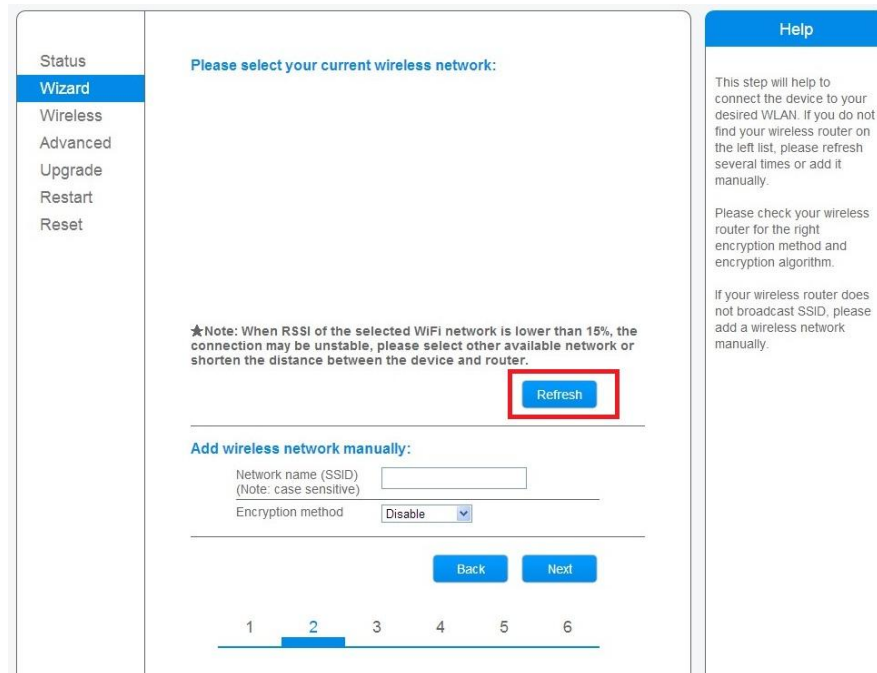

Picture 7-8

Click **Refresh** to search available wireless networks, or add it manually input

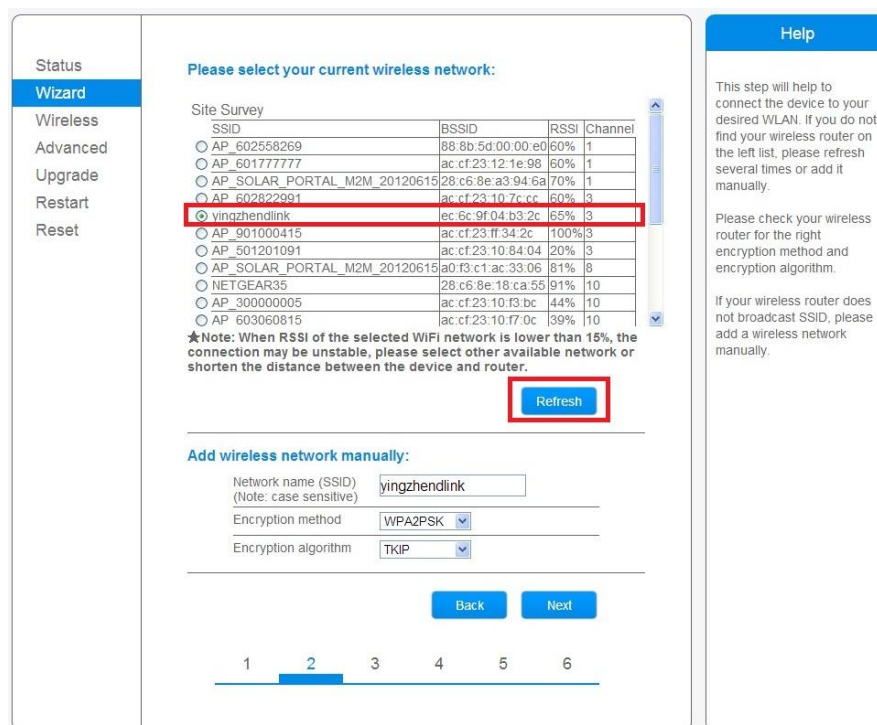


Picture 7-9

Select the wireless network you need to connect, then click **Next**


Notice:

1. If the signal strength (RSSI) of the selected network is <10%, which means unstable connection, please adjust the antenna of the router, or use a repeater to enhance the signal.
2. We recommend router setting:
 - Security setting:WPA2-personal
 - Encryption type:AES

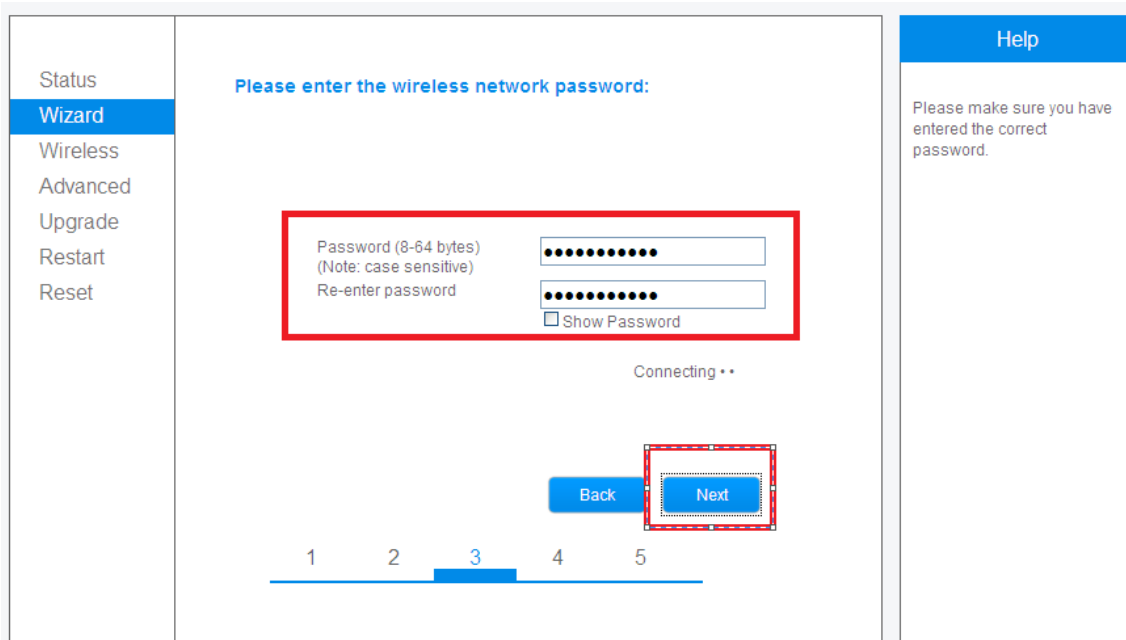

Picture 7-10

Enter the password for the selected network, then click **Next**

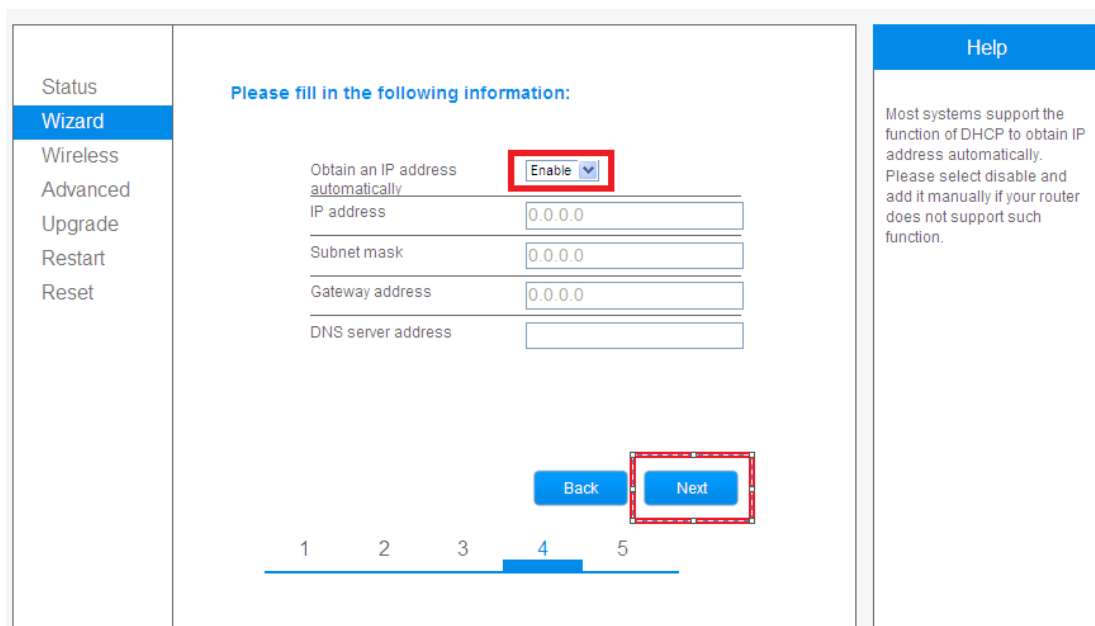


Picture 7-11

Notice:


1. Turn off the firewall of the router
2. Make sure the DHCP function of the router is enable

Select **Enable** to obtain an IP address automatically, then click **Next**

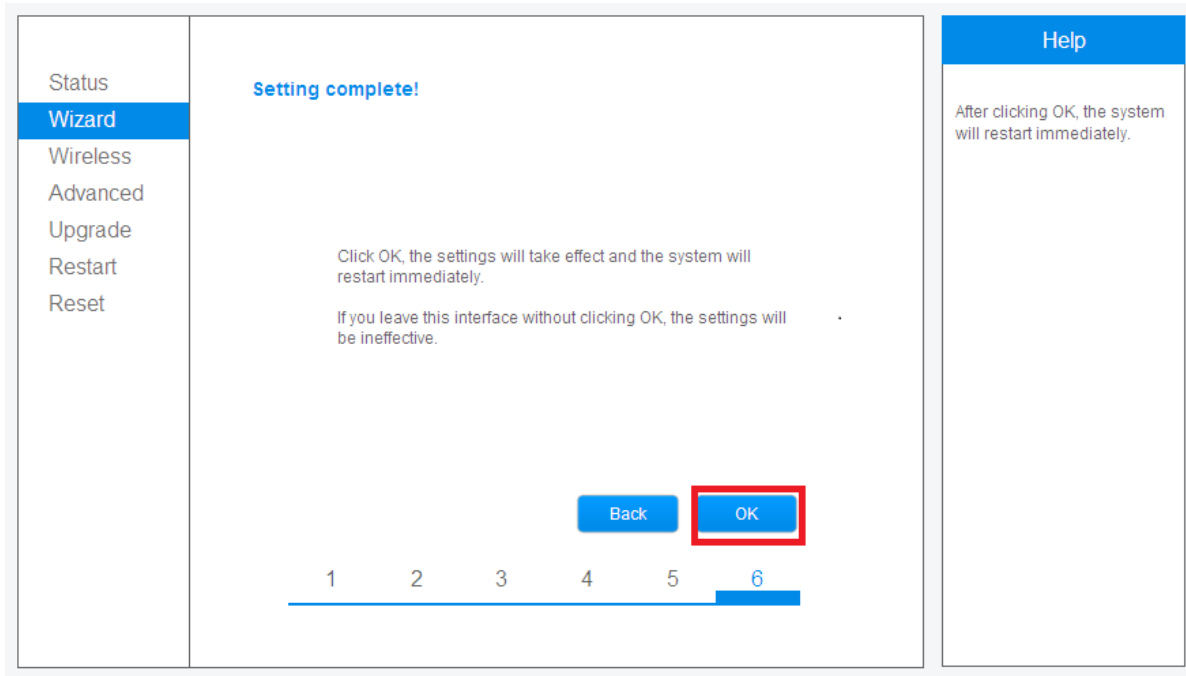

Picture 7-12

If setting is complete, the above page will display. Click **OK** to restart.

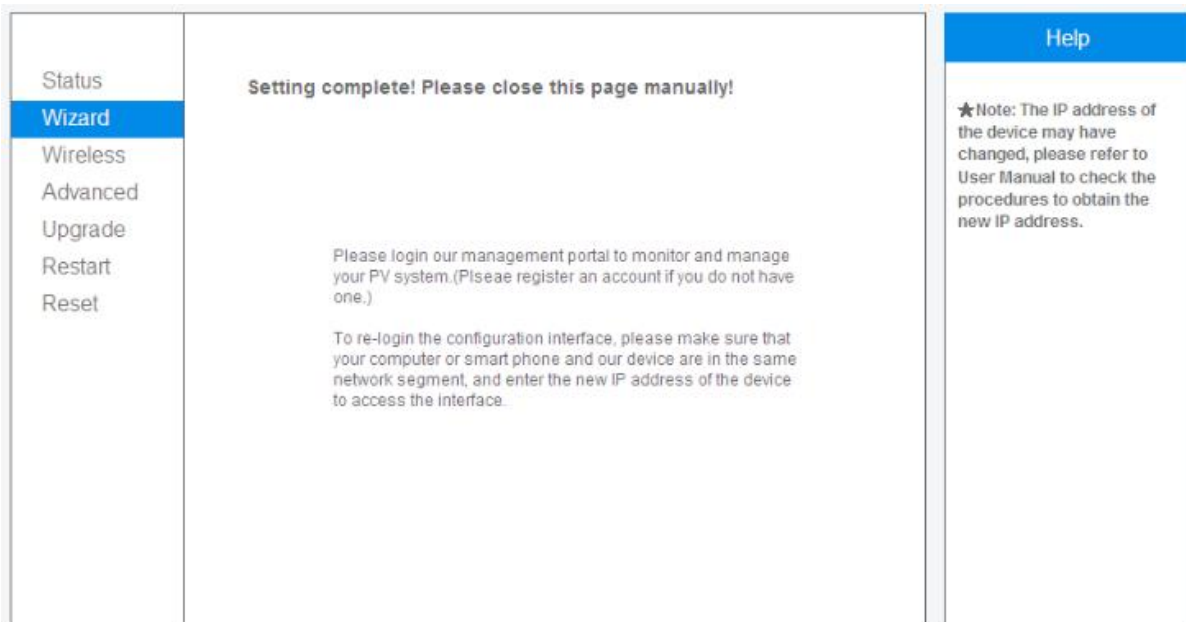

Picture 7-13

If setting is complete, the above page will display.

After your WiFi card set ok and get IP address from your router forexample:192.168.16.8,

(you may see the IP address from LED, please see picture 5-4-3)

Input: <http://192.1168.16.8/> will display the following page:

The screenshot shows the web interface with a sidebar on the left containing navigation options: Status, Wizard, Wireless, Advanced, Upgrade, Restart, and Reset. The main content area is divided into three sections: Inverter information, Device information, and Remote server information. The Inverter information section lists various metrics like serial number, firmware versions, model, power, and yield. The Device information section includes device serial number, firmware version, and wireless settings for both AP and STA modes. The Remote server information section shows ping status for three servers. A 'Help' sidebar on the right explains the device's capabilities as a wireless access point or terminal. Red annotations are present on the STA mode settings, indicating that the 'Wireless STA mode' is set to 'Enable', the 'IP address' is '192.168.1.112', and the 'Remote server A' is 'Pingable'.

| Section | Parameter | Value |
|---------------------------|--------------------------|---------------------------------------|
| Inverter information | Inverter serial number | DEIN202011600196 |
| | Firmware version (main) | GB1-V1.0-0049-4 |
| | Firmware version (slave) | V1.6-0020 |
| | Inverter model | omnik2000tl |
| | Rated power | 2000 W |
| | Current power | 0 W |
| | Yield today | 0 kWh |
| | Total yield | 4.9 kWh |
| | Alerts | F09 |
| | Last updated | 1 Min Ago |
| Device information | Device serial number | 901000414 |
| | Firmware version | H4.01.38Y1.0.07W1.0.05(20130605_4) |
| | Wireless AP mode | Enable |
| | SSID | AP_901000414 |
| | IP address | 10.10.100.254 |
| | MAC address | AC:CF:23:FF:33:2C |
| | Wireless STA mode | connect router,STA will enable Enable |
| | Router SSID | yingzhendlink |
| | Signal Quality | 55% |
| | IP address | get IP from router 192.168.1.112 |
| MAC address | AC:CF:23:FF:33:2D | |
| Remote server information | Remote server A | connect romote server ok Pingable |
| | Remote server B | Pingable |
| | Remote server C | Pingable |

Picture 7-14

You may also add your domain name of Wi-Fi card to easy access according below picture , after you set ok, input http://wifi, you may also access the related page

The screenshot displays a web-based configuration interface for a device. On the left, a vertical menu contains options: Status, Wizard, Wireless, **Advanced** (highlighted with a red box), Remote server, **Wireless point** (highlighted with a red box), Upgrade, Restart, and Reset. The main content area is divided into two sections: 'Wireless access point setting' and 'LAN parameters setting'. The 'Wireless access point setting' section includes fields for Network mode (11b/g/n mixed mode), Network name (SSID) (blue-b+-02), Module MAC address (AC:CF:23:10:F3:C0), Select channel (Auto-select), and Transmission power (High). A 'Save' button is located below these fields. The 'LAN parameters setting' section includes fields for IP address (DHCP gateway setting) (10.10.100.254), Subnet mask (255.255.255.0), DHCP Server (Enable), and Domain name (wifi, highlighted with a red box). A note below the domain name field states: '(The domain name should be within 70 characters, and could be combination of alphabets and numbers, but alphabets must be included)'. A 'Save' button is located below these fields. On the right side, a 'Help' section provides instructions: 'In this page, you can configure the parameters of the device when it works under the wireless access point mode. Please do not change the default settings, or the parameters change will cause device malfunction. * Note: After changing the settings, the device must be restarted.'

Picture 7-15

Now we finish the network setting, then you may login www.omnikportal.com to browse your data.


8. Login the PV monitoring system to manage the power station

After the successful register and account activation, open the login interface as below picture 8-1, input the correct email and code and enter the PV monitoring system, then you can monitor and manage the power station.



Picture 8-1


8.1 “End User” User Interface

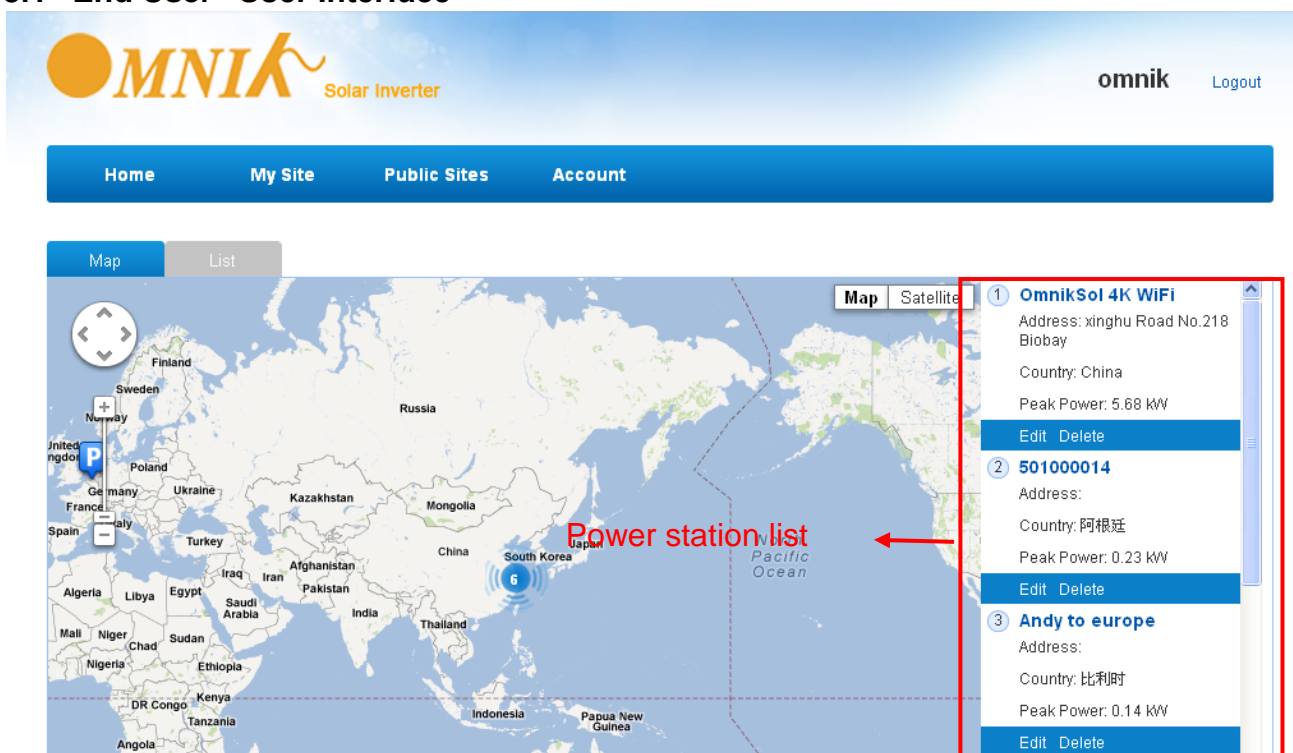

Picture 8-2



Picture 8-3 List of Power Stations

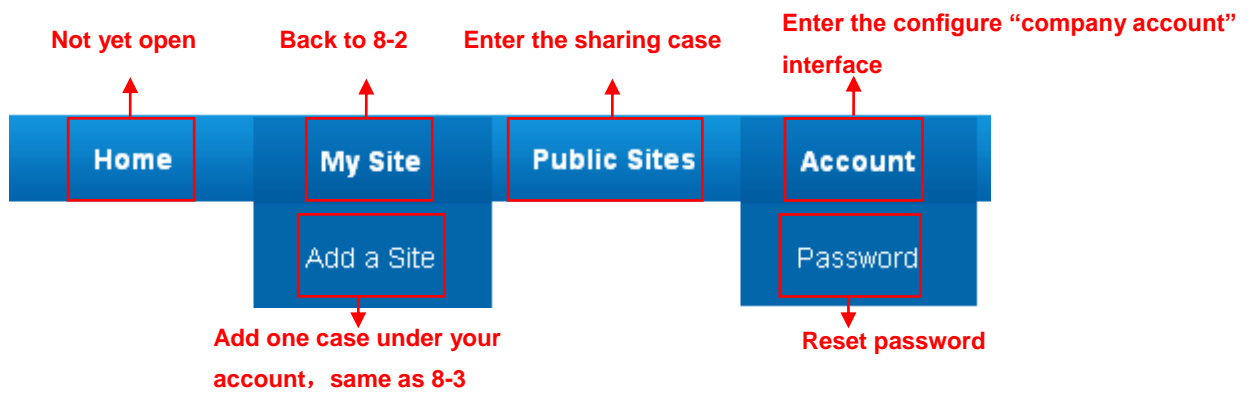

Picture 8-4 Navigation Bar

Home
My Site
Public Sites
Account

OmnikSol 4K WiFi
Overview
Real Time
History
Alert
System

523 Clance of Rali 64-75F | 524 Clance of Rali 63-72F | 525 Clance of Rali 61-72F
Alert: 563 Items

Site Image

Location

Site Profile

- Installed Capacity 2 kW
- Inverter 1
- Panel 38

| Power Now | Today Energy | Monthly Energy | Yearly Energy | Total Energy |
|-----------|--------------|----------------|---------------|--------------|
| 0.00 kW | 0.30 kWh | 105.81 kWh | 1675.28 kWh | 1730.6 kWh |

Power
Energy

OmnikSol 4K WiFi

Print current figure

From 5/23/2012 Day Week Time

Trees Planted


73.55 trees

Carbon Offset


1.73 ton

Energy saving

Picture 8-5 Main interface of Power Station

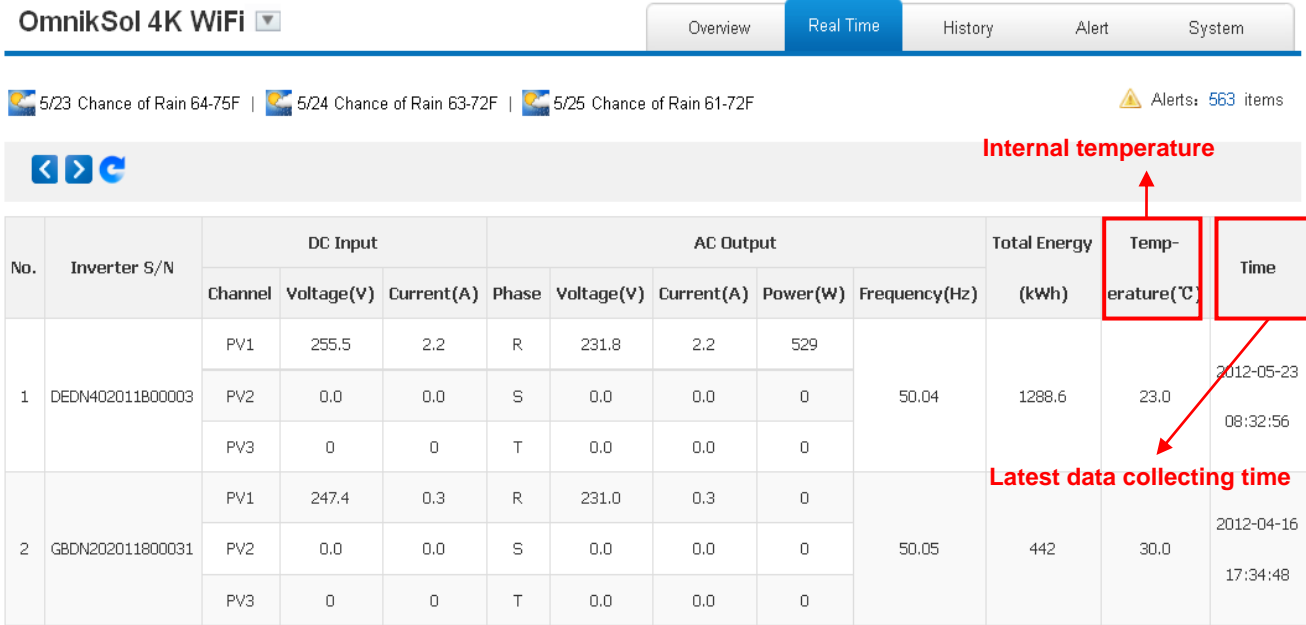

Picture 8-6 Real Time Interface

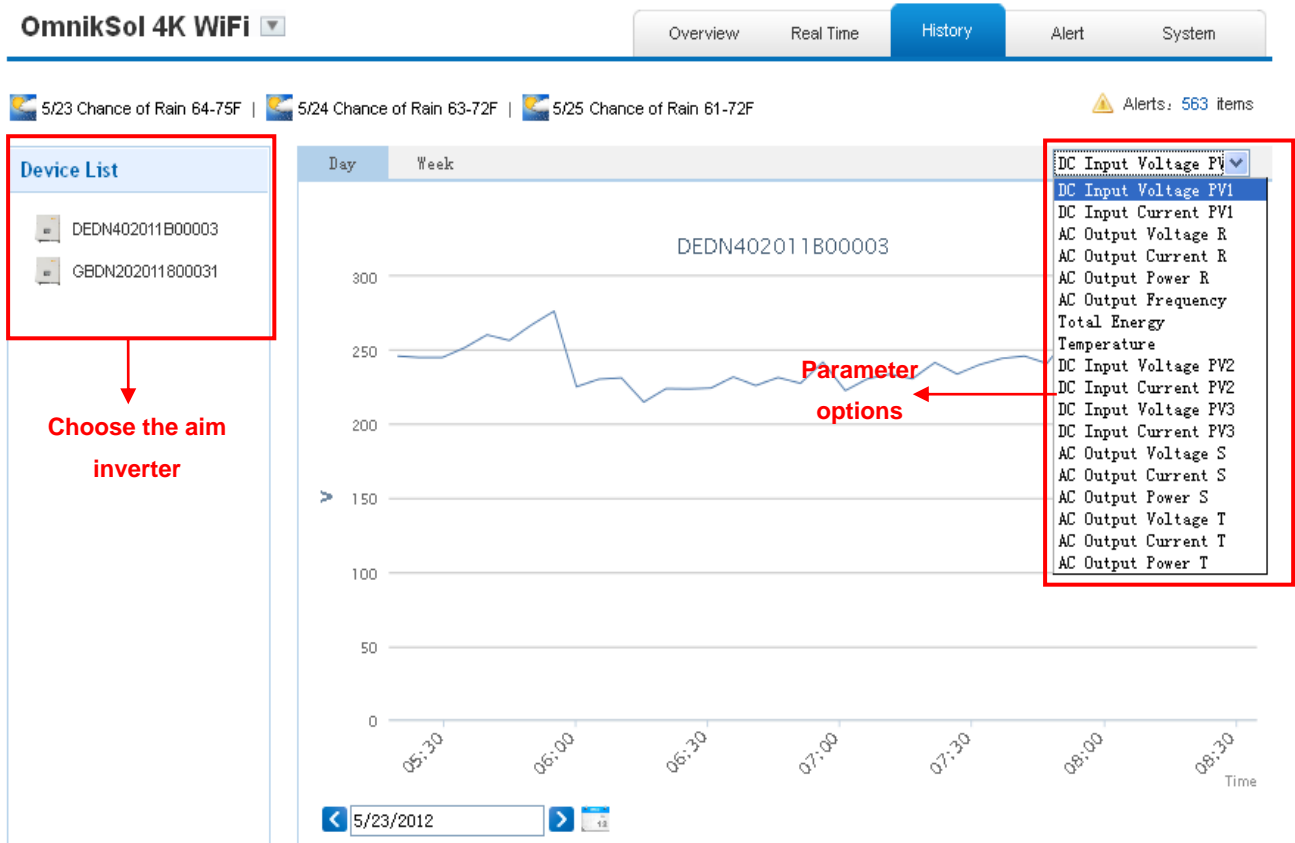

Picture 8-7 History Interface

OmnikSol 4K WiFi Overview Real Time History **Alert** System

5/23 Chance of Rain 64-75F | 5/24 Chance of Rain 63-72F | 5/25 Chance of Rain 61-72F Alerts: 563 items

Select: View All View All Page 1 of 57

| Inverter | Inverter Manufacturer | Information | Code | Alert Time | Status | View History |
|------------------|-----------------------|--------------|------|----------------------------|-----------|--|
| DEDN202011800912 | Default | Utility Loss | F09 | 3/8/2012 16:10:38 | Unhandled | <input type="button" value="History"/> |
| GBDN202011800031 | Default | Utility Loss | F09 | 2/11/2012 11:9:3 | Unhandled | <input type="button" value="History"/> |
| GBDN202011800031 | Default | Utility Loss | F09 | 2/13/2012 12:56:36 | Unhandled | <input type="button" value="History"/> |
| DEDN202011800912 | Default | Utility Loss | F09 | Click ,turn to picture 8-7 | Unhandled | <input type="button" value="History"/> |
| GBDN202011800031 | Default | Utility Loss | F09 | | Unhandled | <input type="button" value="History"/> |
| GBDN202011800031 | Default | Utility Loss | F09 | | Unhandled | <input type="button" value="History"/> |
| GBDN202011800031 | Default | Utility Loss | F09 | 2/11/2012 11:19:10 | Unhandled | <input type="button" value="History"/> |
| GBDN202011800031 | Default | Utility Loss | F09 | 2/13/2012 13:6:38 | Unhandled | <input type="button" value="History"/> |
| GBDN202011800031 | Default | Utility Loss | F09 | 2/11/2012 11:24:14 | Unhandled | <input type="button" value="History"/> |
| GBDN202011800031 | Default | Utility Loss | F09 | 2/13/2012 13:11:42 | Unhandled | <input type="button" value="History"/> |

Picture 8-8 Alert Interface

OmnikSol 4K WiFi Overview Real Time History Alert **System**


5/23 Chance of Rain 64-75F | 5/24 Chance of Rain 63-72F | 5/25 Chance of Rain 61-72F Alerts: 563 items

Site Device


The interface same as picture 8-3

Site Name *

Upload Image



Picture 8-9 System Setting Interface

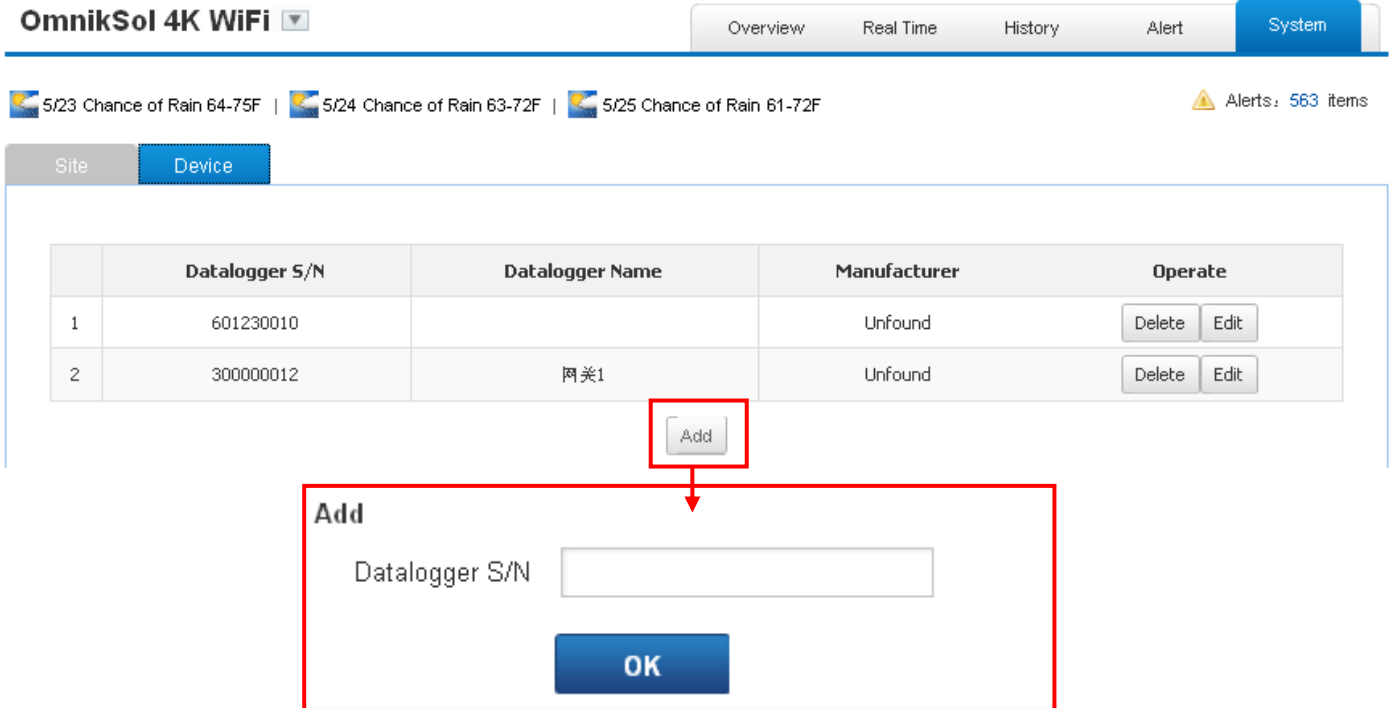


Picture 8-10 System Setting Interface

9. iPhone & iPad application

9.1 Auto Mode

After registration of the power station, you can input the key words: Omnik ,solar, inverter, PV, energy ,plant, monitor at the app store, then you can download the Omnik solar (iPhone) and Omnik Solar HD(iPad) at app store.

After the download input your user name and password, then visit your station,(we supply a free demo, for the users who do not register)choose the power station and enter the main interface, then you the daily energy etc. will be displayed. Meanwhile, you can view the relevant date to view the curve as below:

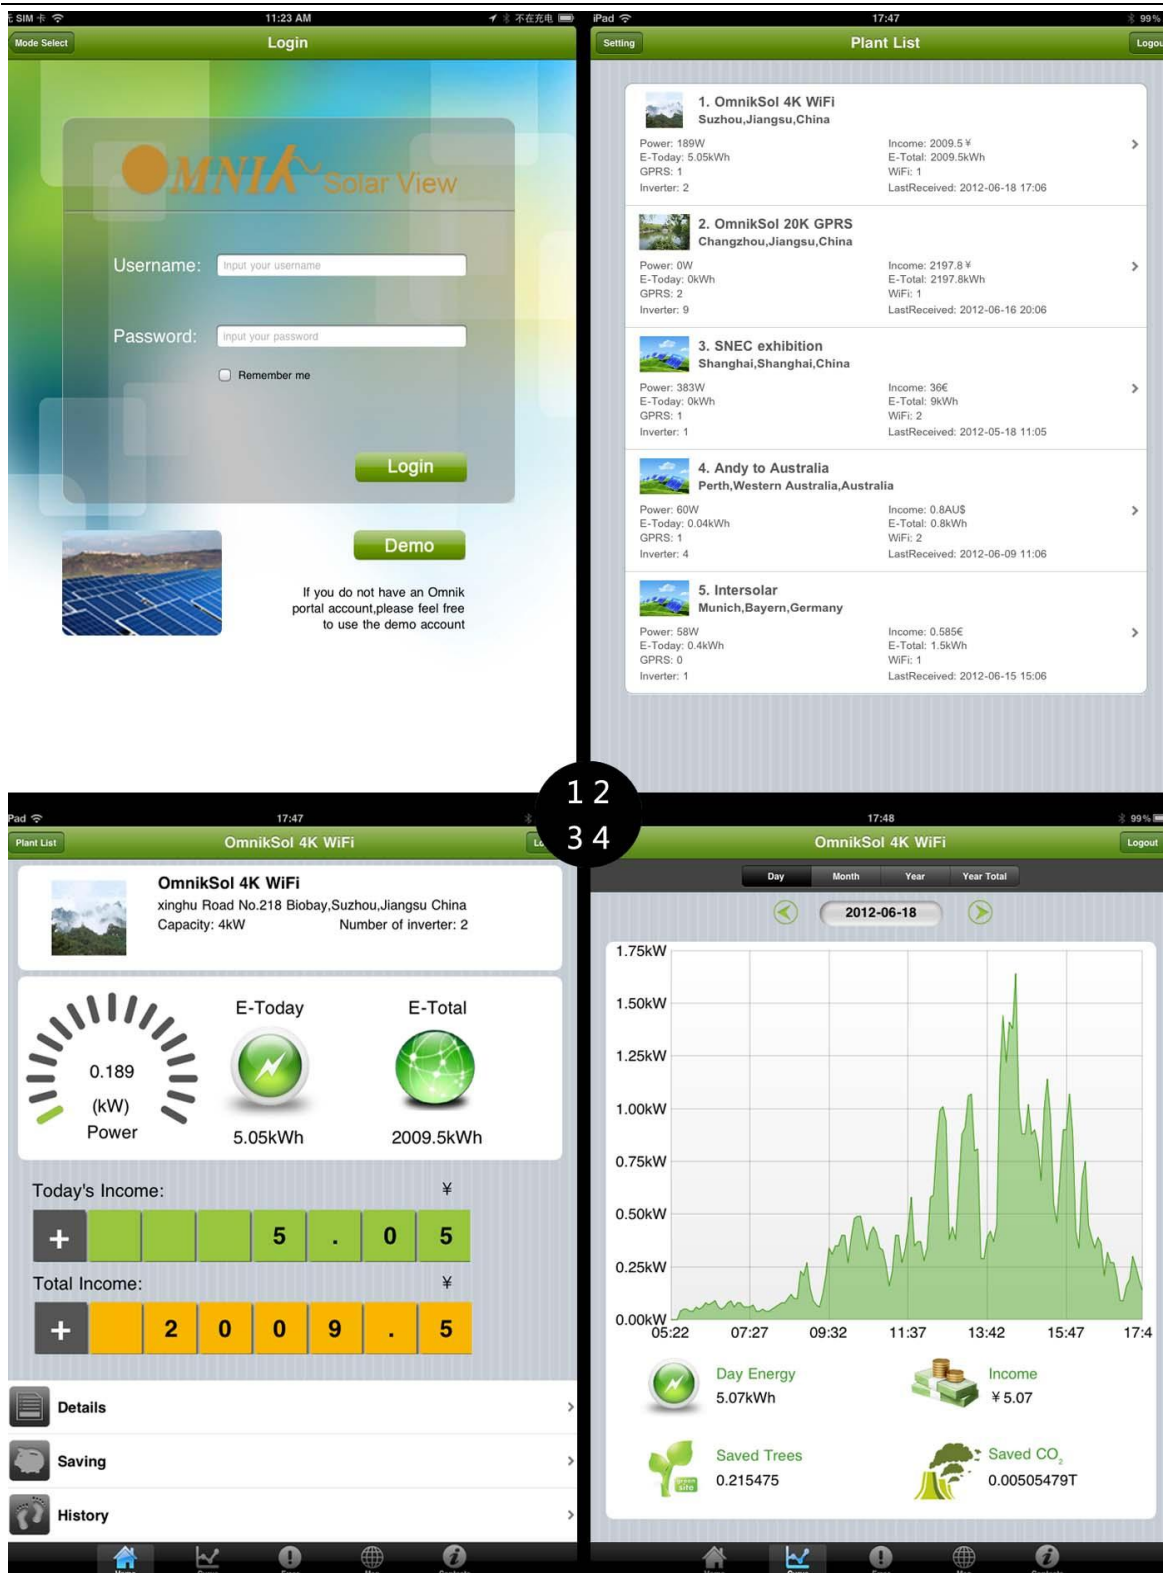

Picture 9-1

1. Log in interface
2. Power station list interface
3. Main interface
4. Daytime curve interface

9.2 Manual Mode

9.2.1 Step for monitoring without Internet connection (Manual Mode)

There are two methods to monitor the inverter via Wi-Fi without the internet connection.

- Device connected directly to the Inverter Wi-Fi.
Search the Wi-Fi list on your smart device and connect to the relevant Inverter Wi-Fi data logger beginning with AP_6xxxxxxx (as shown in the example below).
Open SolarView on your device (which you should have downloaded from Apple APP store), and choose “Manual Mode”. You are now able to monitor the inverter and the power being generated through it.

This example shows device connection to an inverter with 601184936 Wi-Fi:

- Both the Inverter Wi-Fi and monitoring device (Smart Devices using iOS) connected to the LAN (not Internet) via the wireless router. Please follow instructions from 7.Network Settings (In AP mode by WiFi)

After finishing the above procedures, launch the SolarView on your device and click “manual mode”. You are now able to monitor the inverter and the power being generated through it.



Picture 9-2

9.2.2 Features

1. Monitoring Wi-Fi device without internet connection.
2. Display all the relevant data from the inverter.
3. Local access is much faster, and does not rely on external networking.
4. Same functions as online monitoring system.



Picture 9-3

1. Choose interface
2. Connect WiFi card ok
3. Setting page
4. Inverter information

10. Contact

If you have any technical problems about our products , please contact us , you should confirm the follow things before contact us:

- ◆ Device model
- ◆ Data collector serial number
- ◆ The number of connected inverter

Add: Xinghu Road No.218 bioBAY Park A4, Suzhou China

Zip code : 215213

Fax: +86 512 6295 6682

Tel: +86 512 6295 6676

Mail: Sales@omnik-solar.com

Appendix.

1. WiFi Card Install SOP

1.1 Disassembly



Picture A1-1

Unscrew the four screws on the interface panel with the screwdriver as shown in Picture A1-1 and keep the screws aside.




Picture A1-2

Unscrew the two-holed water-proofing connector from the interface panel. The standard connector coming with the inverter is two-holed as shown in Picture A1-2, circled in red.

1.2 Preparation

Pick out the antenna and the water-proofing connector from the package and plug the antenna into the socket circled in red in Picture A1-3 A, as shown in Picture A1-3 B.

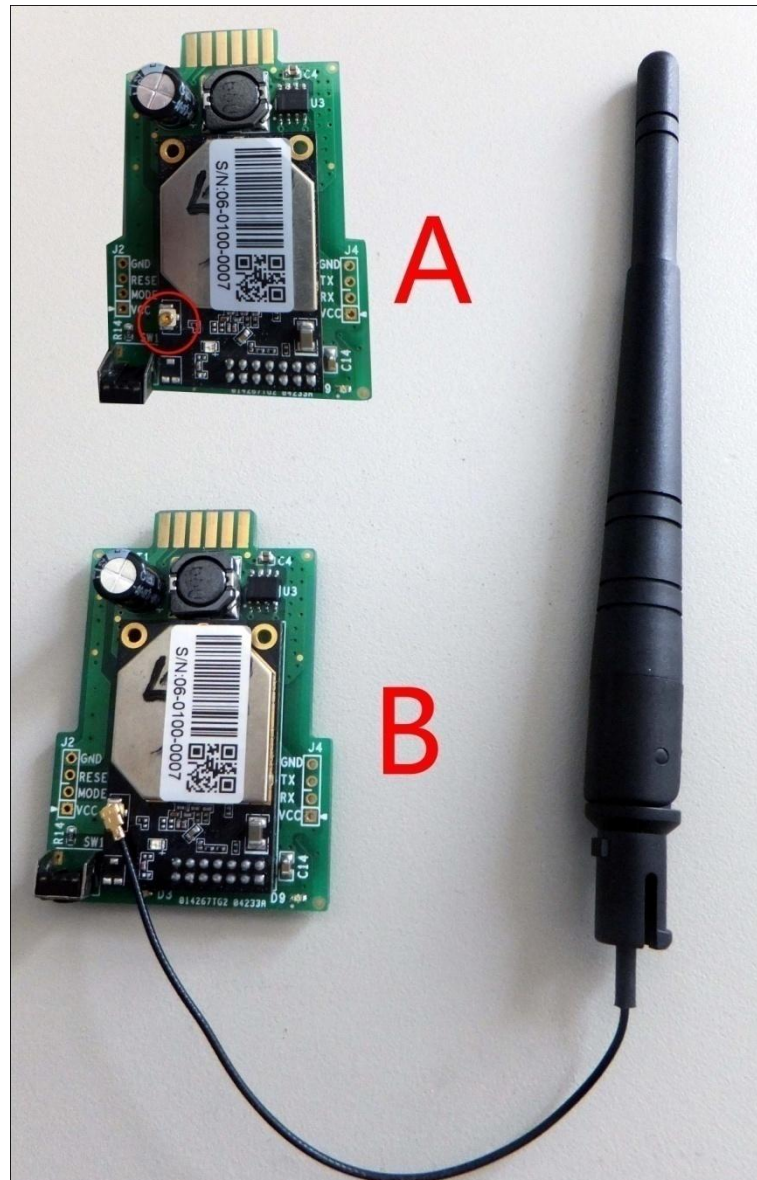

Picture A1-3


The water-proofing connector for WiFi card is single-holed. Screw the connector onto the interface panel with a torque of 2.0N.m, as shown in Picture A1-4:



Picture A1-4

1.3 Installation

Insert the WiFi card into the socket marked in red rectangular in Picture A1-5 A. Gently insert the card until it fully and tightly contacts with the connecting fingers as shown in Picture A1-5 B.

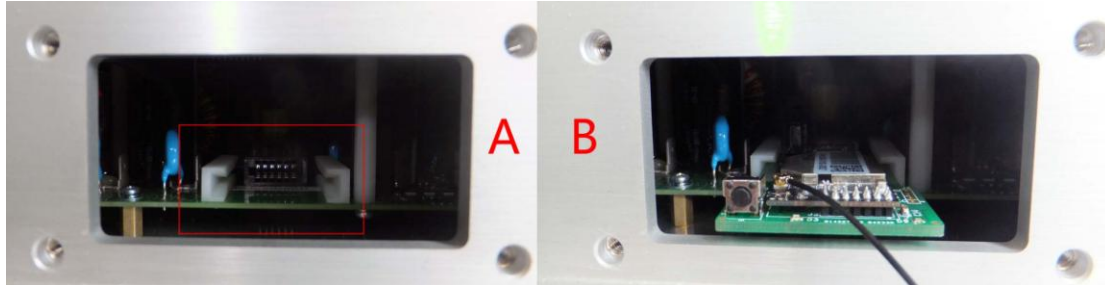

Picture A1-5

Power on the inverter and check if the red LED is lit to indicate the installation is successful, as shown in Picture A1-6. If the red LED is not lit, check if the WiFi card is properly connected to the inverter.



Picture A1-6

Power off the inverter and put the antenna through the water-proofing connector on the interface panel, as shown in Picture A1-7.



Picture A1-7

Screw the interface panel tight onto the inverter with a torque of 1.2N.m as shown in Picture A1-8



Picture A1-8

Tighten the water-proofing connector tight to fixate the antenna with a torque of 1.5N.m in a way that the antenna is properly mounted and can be turned in 360 degrees as shown in below pictures:



Picture A1-9



Picture A1-10



Picture A1-11

2. LED Indicators



Picture A2-1

| LED Name | Status | Description |
|----------|-------------|---|
| RUN | On/Blinking | Module is working |
| | Off | Module is not working |
| LINK | On | Module is successfully connected to the server by WiFi under STA mode |
| | Blinking | The WiFi module is in AP mode |
| | Off | In STA mode; No WiFi connection or no connection to the server |
| STATUS | On | Communication with the inverter is working |
| | Blinking | Communicating with the inverter (transferring data) |
| | Off | Communication with the inverter is not working |

3. Troubleshooting

| Status | | | Possible Causes | Solution |
|-----------------|------|----------|--|---|
| RUN | LINK | STATUS | | |
| On/ Blinking | On | On | Connection is successful | No need |
| On/ Blinking | On | Blinking | Communicating with the inverter | No need |
| Off | Off | Off | No power connection | Check if the connecting fingers are contacting properly |
| | | | | Check if the inverter is working properly |
| On/ Blinking | Off | Off | Inverter connection is abnormal | Check if the inverter is working properly |
| | | | Resetting or initializing | Check the LEDs again after 1 minutes |
| | | | WiFi connection is not successful | Change the position of the inverter or the antenna to get better signal reception |
| | | | Antenna is not properly connected | Check if antenna is connected properly. Screw tight if loose |
| On/ Blinking | On | Off | Communication with the inverter is abnormal | Check if the connecting fingers are contacting properly |
| On/ Blinking | On | X | Connection of the data collector is abnormal | Check the setting of AP wireless router |
| | | | | Check the WiFi settings |

Note 1 : X means status unknown.

Note 2 : If the device is still not working after above operations in the table, please try resetting the device. If it is still not working after the reset, please contact customer service of the manufacturer.